



For compliance with the total emission control and enhancing the value of compliance-focused companies



TPNA-500

Life Cycle Cost (LCC) Reduction

Achieving significant reduction in maintenance man-hours



A state-of-the-art model adopting 60 years of water measurement technology, which achieves a reduction in life cycle costs, and compliance with regulations and corporate compliance.

More than 10 years have passed since the 5th Japanese Waste Water Regulation was enforced in 2001. From the perspective on preservation of ambient water quality, it has become a matter of course for companies to be compliant with regulations and observe corporate compliance. Total nitrogen and total phosphorus monitoring in the future has the potential to lead to proactive enhancement of corporate value, in addition to compliance with regulations. While we propose technological innovations and improvements and LCC reductions, we will pursue the future where regulations are strictly observed and corporate value is improved through monitoring.

Features Life Cycle Cost (LCC)*1 Reduction

POINT

Adoption of stain resistant measurement system

While adopting a reduced reagent volume (1/10) realized by our conventional model, employing a new measurement method (meniscus measurement method) and enhanced automatic washing functions (optional) have been achieved, contributing to lengthening the maintenance cycle.




POINT 2 Reduction in power consumption by approximately 30%, and pure water and waste water to 1/2

We have reduced the cost for electricity, use of pure water and waste water treatment (including labor) as well as environmental burden (as compared with our conventional product).



Others

- A variety of washing functions: sampling point backwash purge function, line washing function during reagent change, automatic sample line washing function*2
- Ultraviolet oxidation decomposition method: Japanese market share of approximately 60%. No. 1 in the industry*3
- Color touch panel: Improved visibility and operability.
- A built-in load volume operation function
- USB data output port

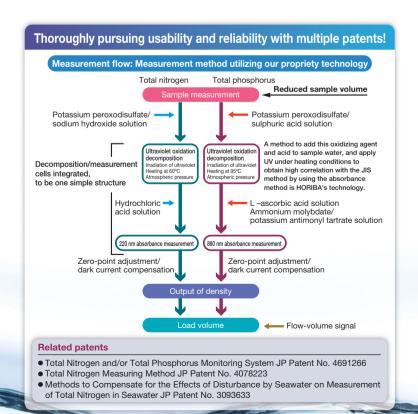




HORIBA

- *1 Life Cycle Cost (LCC): Total cost required for this product from purchase to disposal. Total sum of product cost, installation cost, utility cost (electricity and water), running cost (reagent, waste water treatment, parts and man-hours), maintenance cost (regular overhauls and irregular man-hours), dismantling cost, disposal cost, etc.
- *2 Hydraulic acid washing is optional.
- *3 As of November, 2013. Based on our company's research.

Standard Type



Built-In Pure Water Supply Type

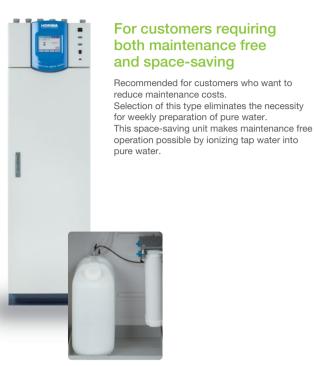

External Pure Water Supply Type



Three-Component Monitoring Type



Measurement of three components regulated by total emission control is concentrated into a space for one conventional COD analyzer

Recommended for customers who have used a combination of a UV monitor and a total nitrogen/phosphorus monitor. Data from the UV monitor is processed by TPNA-500.

* You can choose the installation location for a UV monitor.

Internal Structure "TPNA-500"

Printer

Equipped with an automatic winding function.

Reagent Measuring Unit

Reaction Cell

This is a cell in which reaction takes place between total nitrogen and total phosphorus. After decomposition, absorbance is measured and converted into total nitrogen and total phosphorus densities.

Waste Water Tank

When the tank becomes full of waste water, the contact output for "Waste Liquid Tank Full Alarm" is triggered. The tank capacity is 20 liters.



Operation Unit

Displays measurement results such as measurement values, time, measurement points, as well as operation guidance on setting conditions, maintenance, adjustment, and guidance on alarm content, function keys, etc. A touch panel is employed so that you can directly operate via screen.

Reagent Measuring Unit

Measures the amount of various reagents to be injected (patent pending).

Reagent Tank

A reagent tank is stored. It has an approximate two-month storage capacity. When the reagent level has become low, an alarm will be triggered.

Proposal for preprocessing according to sample conditions Sampling according to SS density (Reference) 200 mg/L 50 100 Intermediate processing of industrial effluent process Final discharge Sample with high density SS Low density SS High density SS Overflow tank Cyclone method (OF-3) Flow-volume flow method (OF-30) nnit Washing YT-5 reagent tank YT-5 reagent tank

Unit (mm) *The installation location of the overflow tank can be changed.

General Specifications	Name	Automatic Total Nitrogen/Phosphorus Monitoring System		
	Model	TPNA-500		
	External dimensions*1	460 mm(W)×385 mm(D)×1600 mm(H)		
	Weight	Approx. 90 kg	Approx. 90 kg	
	Power	AC 100 V~240 V±10% 50/60 Hz		
	Electric power consumption	AC 100 V~240 V: Approx. 250 VA		
Performance Installation environment	Measuring range*2	Total nitrogen: 0~2/5/10/20/50/100/200/500/1000 mgN/L Total phosphorus: 0~0.5/1/2/5/10/20/50/100/250 mgP/L		
	Repeatability	Within ±3% full scale (Total nitrogen full scale: 50 mgN/L or lower and Total phosphorus full scale: 10 mgP/L or lower) Within ±5% full scale (Total nitrogen full scale: 100~1000 mgN/L and Total phosphorus full scale: 20~250mgP/L) Condition: using standardized solution		
	Measurement principle	Total nitrogen: Alkaline potassium peroxodisulfate UV oxidation — UV absorption method Total phosphorus: Potassium peroxodisulfate UV oxidation — molybdenum blue absorption method		
	Number of measured components	1 point (standard), 2 point	s (optional)	
	Number of measuring ranges*3	1 range (standard), 2 ranges (optional)		
	Measurement interval	60 minutes		
	Ambient temperature	2~40°C		
	Ambient humidity	Relative humidity: 85% max. (without condensation)		
	Ambient environment	Well ventilated indoor location without exposure to direct sunlight. Transient overvoltage of main power sorce: Overvoltage category II (IEC60364-44) Pollution level 2 Flat and stable location with minimized vibrations and shocks. Atmosphere free from dust, mist, corrosive gas, etc.		
Measuring conditions	Sample water conditions*4,5,6,7,8	Temperature: $2 \text{ to } 40^{\circ}\text{C}$ (without freezing) Flow rate: $0.5 \text{ to } 5 \text{ L/min}$ (when OF-3 or OF-4 is used), $5 \sim 20 \text{L/min}$ (when OF-30 or OF-40 is used)		
	Pure water Conditions of tap water supply*9	Usage volume Consumption: 43 L/month *This may increase/decrease depending on the measurement range (depends on measurement ranges and the setup of cleaning function) Condition: When pure water is supplied by a customer, shoud be JIS K0557 (1998)*10 A2 or higher and should not contain nitrogen or phosphorus compounds. When using deionizer, adherence to criteria of tap water in Water Supply Act*11 is required. Supply method: Fixed water tank (standard), continuous supply via pure water supply system (optional) Supply pressure: 0.1~0.5MPa		
Input/output specification	Analog output	Number of points	Standard: 4 points, Optional (3 component spec / 2 points spec): 8 points	
		Туре	Standard: 4-20mA DC, 0-16mA DC (Default setting is 4-20mA DC. On-screen switching to 0-16mA DC is available) Optional: 0-1V DC, 1-5V DC	
		Description	Standard: TN concentration, TP concentration, TN load, TP load, time flow rate Optional (three-component spec): COD concentration, COD load, instant concentration of COD "Output contents of COD vary according to a device conditions.	
		Output impedance	500 Ω max.	
	Contact output	Number of points	Standard: 16 points, Optional (3 component spec / 2 points spec): 22 points	
		Format	Non voltage contact output	
		Туре	Insulated output	
		Output capacity	250V AC, 3A / 30V DC, 3A (only 30V DC, 3A are available for "maintenance" contact.)	
		Status output	Meas., Cal., Standby, Maintenance, Synchro. Idle 1, Synchro. Idle 2, Power, etc.	
		Warning output	Limit warnings (concentration of TP, TN, COD), H.Hi limit warnings (concentration of TP, TN, COD), Hi Load Limit warnings (TP, TN, COD), Sample Lack, No blank water, Reagent Lack, Span solution Lack, Waste water tank full, Total Alarm 1-6, various gauge errors, etc.	
		Number of points	Standard: 1 point, Optional (3 component spec / 2 points spec): 2 points	
	Analog input	Туре	Standard: 4-20mA DC, Optional:1-5V DC	
		Description	Flow signal (full scale setting is available optionally), Concentration of UV/COD monitor	
	Contact input	Number of points	Standard: 9 points, Optional (3 component spec / 2 points spec): 18 points	
		Format	Non voltage a contact input (open collector is available)	
		Type	Insulated type input: common to (-) side	
		ON resistance	100 Ω max.	
		Open voltage	26V DC max.	
		Short-circuit current	13 mA DC max.	
		Functions	Meas. Start, Cal. Start, Cleaning Start, Modify Date, Line Select, Flow Mainte, Flow Err., Flow Power OFF, Flow No Drain, UV/COD Mainte, UV/COD Err., UV/COD Power OFF, etc.	
Functions	Display	LCD color touch panel display		
	Load calculation	Standard: TP, TN load calculation, Optional: COD, 2 points load calculation		
	Memory	Measurement values(including daily report and time signal): more than 1 year, Number of alarm records: 100, Number of calibration records: 100, Number of operation records: 100 *The data can be exported through USB interface.		
	Communication	Standard: RS -485, Optional: RS-232C		
	Communication protocol	Modbus®*12		
	Printer	Standard (58 mm); with automatic take-up device.		
	1 2 1 2			

- *1 Compatible with the channel base of former products TPNA-300/PN-100 series (standard)
- *2 The value of "Total Nitrogen full scale ÷ Total Phosphorous full scale" must be between 0.2 and 100.
- *3 The first range must be low concentrations, and for the same components measured, the value of "the full scale of second range ÷ the full scale of first range" must be between 1 and 50. This formula is applicable to both Nitrogen & Phosphorous. This calculation must be of same component.
- *4 A seawater adjustment function (optional) is available for when seawater is mixed in.
- *5 A sample line chemical washing function (optional) is also available depending on sample conditions.
- *6 The auxiliary overflow tank can be installed to the right or left or at the back of the system main body.
- *7 The auxiliary overflow tank should be within 1m from the system main body.
- *8 Should not contain components that affect measurement such as metal ions.
- *9 When tap water is supplied, make sure to conduct flushing for approximately 30 minutes before introducing tap water into equipment.
- *10 Without nitrogen or phosphorus compounds, Conductivity: 0.1 mS/cm max., TOC: 0.5 mg/L max. Please consult separately concerning pure water
- *11 TOC: 3 mg/L max., Nitrate_nitrogen: 10 mg/L max., Nitrite-nitrogen: 10 mg/L max. Please consult separately concerning tap water conditions.
- *12 Modbus is a registered trademark of Schneider Automation Inc.

Water Quality Monitoring System

mount type water quality measuring Turbidity — Water sampling system

- CODA-500: Automatic Chemical Oxygen Demand (COD_{MN}) monitor,
- TPNA-500: Total nitrogen and total phosphorus concentration analyzer,
- OPSA-150 (COD(UV)): Organic Pollutant Monitor with the principle of ultraviolet ray absorption by organic matters
- pH analyzer
- · Conductivity analyzer
- Turbidity analyzer
- Water sampling system
- Operation system
- Data acquisition system (DAS)
- Data communication system
- · Shelter and other equipment



Related Products

UV Monitor OPSA-150

This is a compact, lightweight, maintenance free UV monitor developed to comply with the Total Water Contaminants Regulation and continuously measuring organic matters in sample water such as industrial effluents, river water and seawater. Stable measurements are possible through use of our proprietary Rotary Cell Length Modulation method.

Outputting converted COD values is also possible. Combination with TPNA-500 enables measurement of three elements (total nigtrogen, total phosorus and COD) required to comply with the Total Water Contaminants Regulation.



Automatic COD Analyzer CODA-500

This is a fully automatic COD analyzer with a measurement system adopted based on JIS. Through use of the most appropriate dispensing and measuring method, the amount of reagent required has been successfully reduced to onetenth, while the conventional measuring precision is maintained. In addition, using the reagent delivery service eliminates the necessity for timeconsuming mixing of a reagent. As a result, time required to change a reagent can be reduced, and running cost can also be reduced to approximately 1/2 as compared with our conventional product.





Please read the operation manual before using this product to assure safe and proper handling of the product.

- The specifications, appearance or other aspects of products in this catalog are subject to change without notice.
- Please contact us with enquiries concerning further details on the products in this catalog.
- The color of the actual products may differ from the color pictured in this catalog due to printing limitations.
- •It is strictly forbidden to copy the content of this catalog in part or in full.
- •The screen displays shown on products in this catalog have been inserted into the photographs through compositing.
- •All brand names, product names and service names in this catalog are trademarks or registered trademarks of their respective companies.

http://www.horiba.com e-mail: info@horiba.co.jp

●HORIBA, Ltd. **Head Office**

Place of the control of the control

● PT HORIBA Indonesia Kecamatan Pinang Tangerang - 15144 Phone: 62 (21) 3044-8525

Fax:62 (21) 3044-8521 ●HORIBA Instruments Brasil, Ltda.

Rua:Presbitero Plinio Alves de Souza, 645, Loteamento Polo Multivias Barirro Medeiros - Jundiai Sao Paulo CFP 13.212-181 Brazil Fax: 55 (11) 2923-5490

Tokvo Sales Office

Kanda-Awaji-cho Nichome Building 2-6, Awaji-cho, Kanda, Chiyoda-ku, Tokyo, Japan

Phone: 81 (3) 6206-4721 Fax: 81 (3) 6206-4730

●HORIBA (Thailand) Ltd. 393, 395, 397, 399, 401, 403, Latya Road, Somdetchaopraya, Klongsan, Bangkok 10600, Thailand

Phone: 66 (0) 2 861 5995 ext.123 Fax: 66 (0) 2 861 5200

● HORIBA UK Limited Northampton Office Kyoto Close

Moulton Park, Northampton NN3 6FL, UK Phone: 44 (1604) 542-500 Fax: 44 (1604) 542-699

●HORIBA (China) Trading Co., Ltd.

Shanghai Office
Unit D, 1F, Building A, Synnex
International Park, 1068
West Tianshan Road,
Shanghai, 200335 China Phone: 86 (21) 6289-6060 Fax: 86 (21) 6289-5553

Beijing Office, 12F, Metropolis Tower, No.2, Haidian Dong 3 Street, Beijing, 100080, China Phone: 86 (10) 8567-9966 Fax: 86 (10) 8567-9066

●HORIBA India Private Limited

Delhi Office 246, Okhla Industrial Estate, Phase 3 New Delhi - 110020,

Phone: 91 (11) 4646-5000 Fax: 91 (11) 4646-5020

●HORIBA (Austria) GmbH Kaplanstrasse 5 A-3430 Tulln. Austria

Phone: 43 (2272) 65225 Fax: 43 (2272) 65230

●HORIBA Korea Ltd.

10, Dogok-Ro, 6-Gil, Gangnam-Gu, Seoul, 135-860, Korea Phone: 82 (2) 753-7911 Fax: 82 (2) 756-4972

Leichlingen Office

D-42799 Leichlingen Germany Phone: 49 (2175) 8978-0

Julius-kronenberg Str.9

Fax: 49 (2175) 8978-50

Pune Office 502, 5th Floor, Purushottam Plaza, Baner Road, Baner, Pune - 411045 India Bangalore Office Kamadhenu, No.17/1 - 32, Bannerghi 500000 Audugodi 560030 Phone: 91 (20) 4076-6000 Fax: 91 (20) 4076-6010

● HORIBA Europe GmbH Head Office Hans-Mess-Str.6

D-61440 Oberursel Germany Phone: 49 (6172) 1396-0 Fax: 49 (6172) 1373-85

Bangalore India Phone: 91 (80) 22210071

Head Office
10, Ubi Crescent #05-12
Lobby B Ubi Techpark
Singapore 408564
Hanoi Office
Unit 10, 4 Floor, CMC tower,
Duy Tan Street, Dich Vong
Hau Ward, Cau Giay district,

Lobby B Ubi Techpark Singapore 408564 Phone: 65 (6) 745-8300 Fax: 65 (6) 745-8155

Hanoi, Vietnam Phone: 84 (4) 3795-8552 Fax: 84 (4) 3795-8553

■HORIBA Instruments Incorporated

Irvine Office 9755 Research Drive, Irvine, CA 92618, U.S.A. Phone: 1 (949) 250-4811 Fax: 1 (949) 250-0924

Alvin, TX Office 5318 W.FM517 Rd, Alvin, TX 77511, U.S.A Phone: 1 (281) 482-4334 Fax: 1 (281) 614-0303

●HORIBA France Sarl 12. Av des Tropiques Hightec Sud, F-91955 Les Ulis,

HORIBA Czech CZ-10200 Praha 10. Czech Republic Phone: 420 (2) 460-392-65 Phone: 33 (1) 69-29-96-23 Fax: 33 (1) 69-29-95-77

Bulletin:HRE-3941A

Printed in Japan TS-N (SK) 23