


LAQUA

Quick Manual

COND meter DS-72




HORIBA
Scientific

CODE : GZ0000272697
October, 2011 © 2011 HORIBA, Ltd.


Preparation

① Connect the electrode to the COND meter

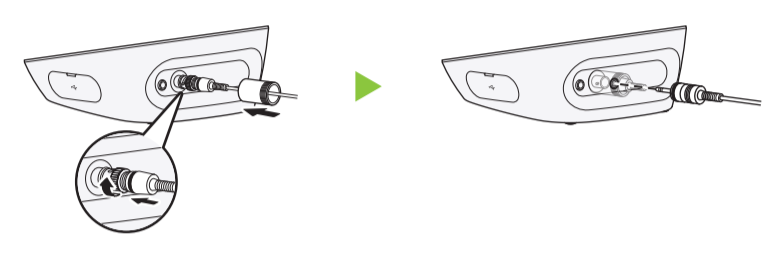

Electrode terminal Temperature sensor terminal


② Press the power button of the COND meter



☆ Press the power button for 2 seconds.
※ Wait for 10 seconds after connecting the AC adapter before pressing the power button.


Set the cell constant

① Enter the set up mode

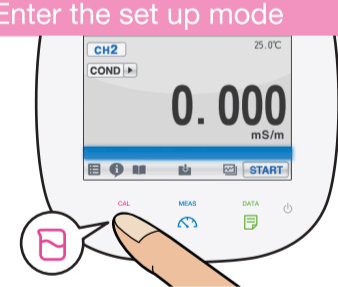


② Set the cell constant

Check the label on the electrode.
Example.) 3552-10D
 $1.057 \times 100 \text{ m}^{-1} (1\text{cm}^{-1})$

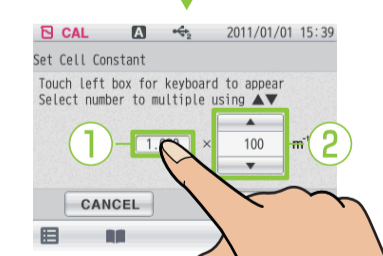

① Use the numerical keypad to enter and press **ENTER** button.




② Set the digit number with **▲▼** button.

Register it with **ENTER** button.

To measurement


Measurement

① Enter the measurement mode

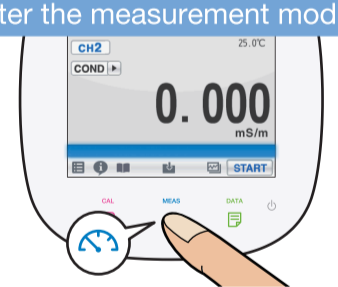


② Start the measurement

Immerse the electrode in the sample until the liquid junction part is fully submerged.

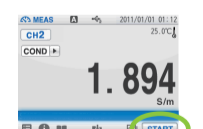

Confirm that the instantaneous value is stable, then press **START** button.

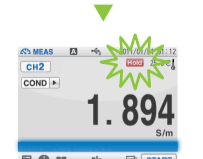

When the **Hold** indication changes from the blinking state to the lit state, measurement is complete.