

NEW

Dissolved oxygen concentration monitor series for semiconductor manufacturing

RCA Cleaning Process

Cu Plating Process

Pure Water Measurement



HD-960LR



HD-960L-M



HD-960

Ideal for measuring dissolved oxygen concentration in Wet Process from Front-end of Line to Back-end of Line. By adopting a chemical resistant sensor, it is possible to support a wide range of dissolved oxygen concentration measurements from facility to process usage.

The latest model of dissolved oxygen monitor **HD-960LR**


- **Features**
 - Dissolved oxygen concentration can be measured even with the chemical conditions below.
 - ☑ Ammonia concentration is 1% or lower, sample temperature is 25 °C ±2 °C
 - ☑ Organic solvent with boiling point higher than water
 - Able to measure dissolved oxygen concentrations of more types of chemicals used in semiconductor processes.



■ Comparison with previous models


	Latest model	Previous models	
	High flow rate and long life	High flow rate (Sample to circulate)	Low flow rate (Sample to drain)
Model	HD-960LR	HD-960L-M	HD-960
Sensor unit dimensions	W170 (200) x H95 x D135	W120 (150) x H95 x D108	W87 (117) x H131 x D94
Flow rate	600 - 2000 mL/min (Sensor membrane: 25 μm) 400 - 2000 mL/min (Sensor membrane: 50 μm)	200 - 2000 mL/min (Sensor membrane: 25 μm/50 μm)	15 - 200 mL/min (Sensor membrane: 25 μm/50 μm)
Temperature	20 - 60 °C	20 - 60 °C	10 - 45 °C
Pressure	0 - 0.2 MPa	0 - 0.2 MPa	0 - 0.1 MPa
Response speed	30 sec (90%) @400 mL/min	30 sec (90%) @400 mL/min	30 sec (90%) @200 mL/min
Sample	Ammonia concentration is 1% or lower, sample temperature is 25 °C ±2 °C Organic solvent with boiling point higher than water.	Pure water Low concentration HF (5700 ppm or less)	Pure water Low concentration HF (5700 ppm or less)
Equipment configuration	Converter: HD-960LR Sensor unit: DO-120 Bottle unit: DO-120-B Sensor: 5622 Connection cable: CK-05PS (5 m) Relay cable: CK-01DO (1 m)	Converter: HD-960L-M Sensor unit: DO-110 Sensor: 5611 Connection cable: CK-05PS (5 m)	Converter: HD-960L Sensor unit: DO-100 Sensor: 5600 Connection cable: CK-05PS (5 m)

■ Measurement data (In-house reference data)

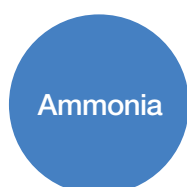


- Measurement condition** ▶ Sample: Ammonia (28%)
- ☑ Membrane: 25 μm
 - ☑ Temperature: Room temperature
 - ☑ Conduct regular sensitivity check by measuring atmospheric air

Measurement result ▶ Abnormal measurement tends to occur within 5 days of operation for the previous models. The latest model is able to achieve stable measurements for about 480 days.

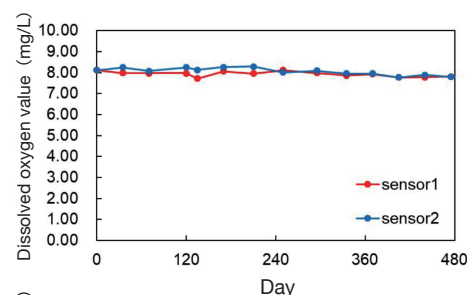

- Measurement condition** ▶ Sample: Organic solvent
- ☑ Membrane: 50 μm
 - ☑ Temperature: 60 °C
 - ☑ Conduct regular sensitivity check by measuring atmospheric air

Measurement result ▶ Abnormal measurement tends to occur within 5 days of operation for the previous models. The latest model is able to achieve stable measurements for about 210 days.

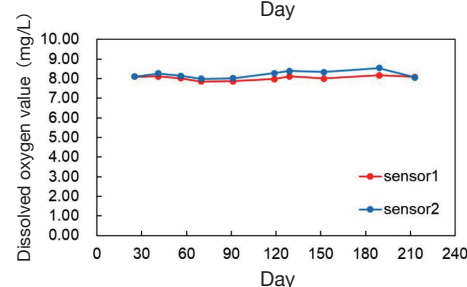

The HORIBA Group adopts IMS (Integrated Management System) which integrates Quality Management System ISO9001, Environmental Management System ISO14001, and Occupational Health and Safety Management System ISO45001. We have now integrated Business Continuity Management System ISO22301 in order to provide our products and services in a stable manner, even in emergencies.



Please read the operation manual before using this product to assure safe and proper handling of the product.

- The specifications, appearance or other aspects of products in this catalog are subject to change without notice.
- Please contact us with enquiries concerning further details on the products in this catalog.
- The color of the actual products may differ from the color pictured in this catalog due to printing limitations.
- It is strictly forbidden to copy the content of this catalog in part or in full.
- The screen displays shown on products in this catalog have been inserted into the photographs through compositing.
- All brand names, product names and service names in this catalog are trademarks or registered trademarks of their respective companies.

HORIBA Advanced Techno

Head Office
2 Miyahonogashi-cho, Kisshoin, Minami-ku, Kyoto, 601-8551, Japan
Phone: 81 (75) 321-7184 Fax: 81 (75) 321-7291
<http://www.horiba-adt.jp>

HORIBA

Group Head Office
2 Miyahonogashi-cho, Kisshoin, Minami-ku, Kyoto, 601-8510, Japan
Phone: 81 (75) 313-8121 Fax: 81 (75) 321-5725
<http://www.horiba.com>

Bulletin: HAE-T0235A

Printed in Japan 2109SK12