

DO チップ 7541 取扱説明書

この度は、当社製品をお買い上げいただきありがとうございます。
お使いになる前に、本書をお読みください。

取り扱い上の注意


- 隔膜に傷を付けないでください
このDOチップには、ごく薄い隔膜が張ってあります。膜面に硬いものを当てたり、強く押ししたりして傷を付けないようにしてください。
- 防水を確実にしてください
このDOチップは、Oリングを介してDO電極ボディに取り付け、水の浸入を防いでいます。
- 内部液に触れないでください
DOチップの内部液は強アルカリ性ですので、衣服や皮膚についた場合は、ただちに水洗いしてください。目に入った場合は、すぐに大量の流水で洗った後、医師の処置を受けてください。

保管


- 保管するときは、ソケットをはめます。
DOチップ単体で保管するときは、DO電極ボディからはずして、必ずショートソケットをはめ、冷暗所にて保管してください。

取り付け手順


- ① DOチップをバックから取り出します。
バックの隅に切れ目がありますので、そこから引き裂き、DOチップを取り出します。

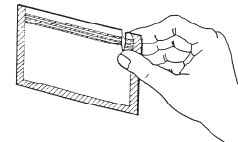

- ② ショートソケットをはずします。

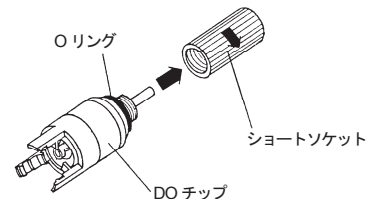

- ③ DO電極ボディにDOチップを取り付けます。
DO電極のコネクタ部分にサンプル水が入らないようにしっかりとねじ込んでください。

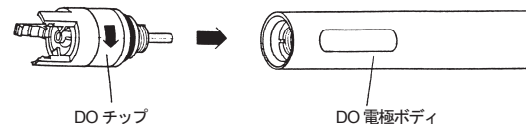

注記) 取りはずしたショートソケットは保管時に必要ですので捨てないでください。

株式会社 堀場アドバンスドテック

〒601-8306 京都市南区吉祥院宮の西町31番地
<http://www.horiba-adt.jp>

製品に関する技術的なお問い合わせやご相談は、
カスタマーサポートセンターまでお願いいたします。
フリーダイヤル 0120-37-6045
受付時間 9:00 ~ 12:00、13:00 ~ 17:00
(祝祭日を除く月曜日～金曜日)

7541 DO Tip Instruction Manual

Thank you for your purchasing a HORIBA DO tip. Read this manual carefully before using the tip.

Precautions on handling


- Be careful not to scratch membrane.
DO tip is covered with extremely thin fragile membrane. Do not damage it by hitting or pushing DO tip strongly.
- Ensure complete waterproofing.
DO tip mounted on sensor body is designed to prevent infiltration of sample by means of O-ring.
- Do not touch the inner solution.
The inner solution is strongly alkaline. If it sticks to your cloth or skin, wash it away with water sufficiently. The cornea of an eye is weak to alkali. Do not to allow any droplet of inner solution to contact eyes in particular.

Storage


- Connect the short socket before storage.
When storage of independent DO tip is intended, remove DO tip from DO electrode body.
Be sure to connect DO tip to the short socket, and store it in a cool dark place.

Mounting procedure


- ① Take a DO tip out of a pack.
The pack has a notch at its edge.
Tear the pack from there, and take out DO tip.

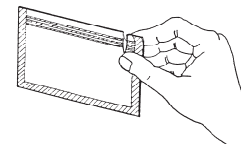

- ② Disconnect the short socket.

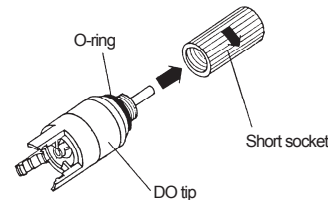

- ③ Attach DO tip to DO electrode body.

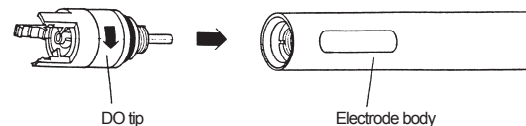

Keep the short socket after detaching it from DO tip; you will need it for storing DO tip afterwards.