


Water Distribution Monitor

TW-100



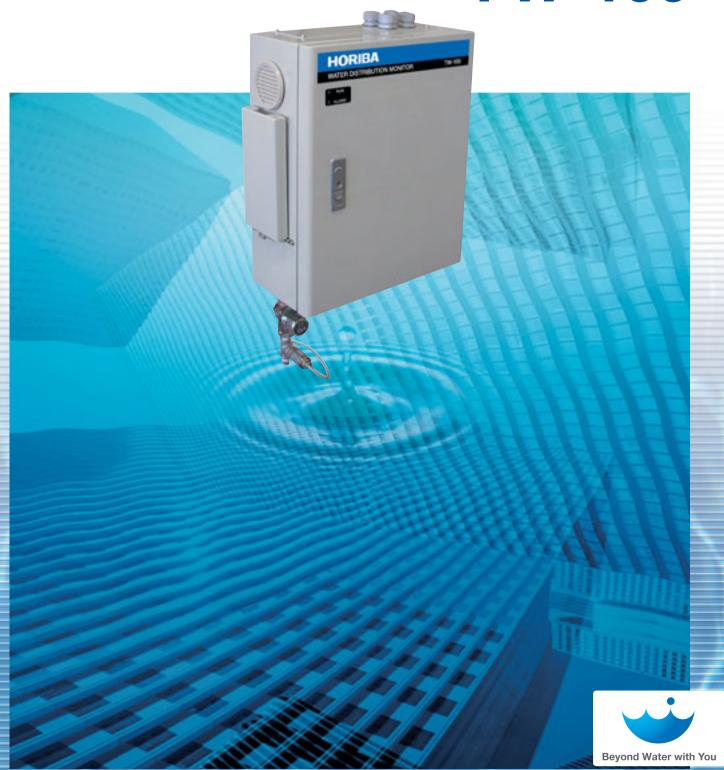

Water Distribution Monitor

TW-100

HORIBA's TW-100 is a process water quality measurement system designed for drinking water and water distribution plants. The TW-100 monitors turbidity, color, free chlorine and pressure. This chemical free method reduces operating costs as it requires minimal maintenance and improves process control.

This compact system is equipped with sensors to monitor four water quality parameters. Optional sensors can be added to monitor as many as seven water quality parameters. No reagents are required for the measurement.


Standard Four parameters:
Turbidity, color, free chlorine, water pressure

Seven parameters: Turbidity, color, free chlorine, water pressure, pH, electric conductivity, water temperature



The instrument is operated with a touch screen panel for easy operation and display of measured values.

■ Operation panel specifications 320x240 dots Black and white graphic LCD with backlight

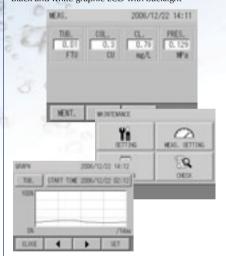

The compact size allows for more installation location options and space for operation.

Features:

- Automatic cleaning
- Adjustable measurement frequency
- Variable sample volume
- Automatic zero calibration
- Internal water leak detection and alarm
- Data storage to compact flash card



Reagent bottle tray for calibration (standard)

[Chart 1]

■Standard type

Parameters	Method	Range	Repeatability	Calibration method
Turbidity	Transmitted light absorption	0 to 2 FTU, 0 to 4 FTU	Full scale ±2.5%	Formazin standard solution or polystyrene latex standard solution
Color	Transmitted light absorption	0 to 10 CU, 0 to 20 CU	Full scale ±5.0%	Standard color solution
Free chlorine	Polarography	0 to 2 mg/L	Full scale ±2.5%	DPD colorimetry
Water pressure	Diaphragm pressure sensor	0 to 1 MPa	Full scale ±1.0%	Standard pressure gauge

■ Option (each parameter can be added to the standard type)


				• •		
	Parameters	Method	Range	Repeatability	Calibration method	
	рН	Glass electrode	pH 2 to 12	±0.1 pH	pH 7 and pH 9 standard solutions	
	Conductivity	AC bipole	0 to 50 mS/m	Full scale ±2.0%	KCL standard solution	
	Water temperature	Thermistor	0 to 50°C	±0.5°C	Standard thermometer	

■System specifications


Product name	Water Distribution Monitor		
Model name	TW-100		
Parameters	Turbidity, color, free chlorine, water pressure (standard); pH, conductivity, water temperature (option)		
Methods	See chart 1.		
Range	See chart 1.		
Repeatability	See chart 1.		
Display	LCD display: 320 x 240 dot B&W graphic LCD with backlight (touch panel type) Standard version simultaneously displays four measurement categories (turbidity, color, free chlorine, and water pressure); Optional version simultaneously displays up to seven parameters (the four parameters plus pH, conductivity, and water temperature)		
Calibration method	See chart 1.		
Automatic zero calibration	(Turbidity, color, free chlorine) Calibration method: Measurement of filtered sample water Trigger: Internal control (timer) or external control. Interval: 1 to 9999 hours (can be set as desired within that range) Time: 20 to 99 minutes (can be set as desired within that range)		
Automatic cleaning	(Turbidity, color) Cleaning method: Wiper cleaning Trigger: Internal control (timer) or external control. Interval: 5 to 9999 hours (can be set as desired within that range) (Free chlorine) Continuous cleaning with beads grinder		
Sample water conditions	Temperature: 0 to 40°C (must not freeze) Pressure: 0.1 to 0.75 MPa Flow rate: over 100 mL/min Flow rate for measurement: 50 to 100 mL/min * Be sure to flush the sample water before starting the system. * Be sure to install a bypass for the pipe to which the system is attached. * If there is any possibility that the sample water could freeze, please protect the system from cold temperature.		
Ambient temperature/humidity	Temperature; 0 to 40°C; Humidity: 85% or less		
Analog output	Type: Measurement value: Same number as parameters (4 standard, 7 as maximum) Specifications: DC 4 to 20 mA, insulated output (no insulation between parameters), maximum load resistance 600 Ω		
Output signal	Type: Power off, batch alerts, maintenance Details: Power off: Output when power is off. Batch alerts: Cell temperature error, compensation temperature error, cell wiper error, internal communication error, water leak, battery error, upper and lower limit of measurement, light source error, zero calibration, span calibration, analyzer error Maintenance: Output when the system is in maintenance or calibration mode. Specifications: Non-voltage contact output, a contacts Contact ratings: AC 125 V, 0.3 A, DC 30 V, 1 A (depends on resistance load), each output COM is independent.		
Input signal	Type: Cleaning start, zero calibration start, error check sequence start, error water sampling start Details: Cleaning start: Cleaning procedure initiated with closed contact input Zero calibration start: Zero calibration initiated with closed contact input Error discrimination start: Error discrimination initiated with closed contact input Error water sample sampling start: Error water sample sampling initiated with closed contact input Specifications: Non-voltage contact input (open collector contact can be used), insulated input Resistance when ON: Maximum 100 W; Open voltage: DC 26 V; Short-circuit current: Max. 13 mA		
Communications	Interface: RS-232C compliant (*Remote monitoring system is option)		
Functions	Estimation of sample water volume (counting type), internal water leak detection, error water sampling		
Data memory	Measurement values for each parameters are stored in the unit's data memory. Data can be transferred to a CF card. Memory interval: 1 minute or 1 hour Memory schedule: At the top of the hour Data memory longevity: 1 minute intervals: About 10 days; 1 hour intervals: About 1 year. * The latest data is written to up date a series of data.		
Wiring contact	Wiring ground: For power source: φ4.5 to φ6; For input/output: φ12.5 to φ14		
Piping contact	Sample water input: Rc 1/4; Drainage: Rc 1/4; Calibration solution input: Rc 1/8; Error sample sampling aperture: Rc 1/8		
Construction	Designed for indoor installation. * Housed in a special case (frame) for exterior installation (option).		
Power	AC 100 V to AC 230 V, ±10%, 50/60 Hz		
Power consumption			
Weight	Approx. 15 kg (Measurement unit only)		
External dimensions	350 mm (W) x 160 mm (D) x 420 mm (H) (not including installation fixtures and projecting portions)		
Paint color/Material	Munsell 5PB8/1; Unit case is made of SUS.		
Installation environment	 ●Install on a flat surface without vibration shocks. ●No dust, mist, or corrosive gases in the atmosphere. ●Lower air pressure. ●No direct sunlight. ●Ventilated air. ●2,000 m or less above sea level. 		

■ Exterior dimensions (unit: mm)

Main unit

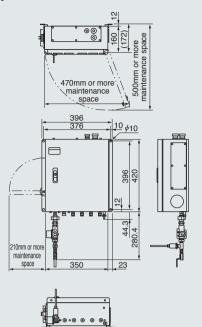

Outdoor specification

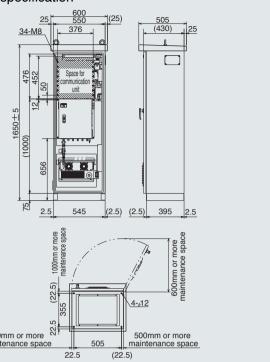



The HORIBA Group adopts IMS (Integrated Management System) which integrates Quality Management System ISO9001, Environmental Management System ISO14001, and Occupational Health and Safety Management System OHSAS18001. We have now integrated Business Continuity Management System ISO22301 in order to provide our products and services in a stable manner, even in emergencies



Please read the operation manual before using this product to assure safe and proper handling of the product.

- ●The specifications, appearance or other aspects of products in this catalog are subject to change without notice.
- •Please contact us with enquiries concerning further details on the products in this catalog.
- •The color of the actual products may differ from the color pictured in this catalog due to printing limitations.
- •It is strictly forbidden to copy the content of this catalog in part or in full.
- •The screen displays shown on products in this catalog have been inserted into the photographs through compositing.
- •All brand names, product names and service names in this catalog are trademarks or registered trademarks of their respective companies.

HORIBA

Head Office 2 Miyanohigashi, Kisshoin Minami-ku, Kyoto, Japan Phone: 81 (75) 313-8123 Fax: 81 (75) 321-5725 http://www.horiba.com e-mail: info@horiba.co.jp

Manufactured by

HORIBA Advanced Techno

HORIBA (China) Trading Co., Ltd.

China Unit D, 1F, Building A, Synnex International Park, 1068 West

Tianshan Road, Shanghai, 200335, China Phone: 86 (21) 6289-6060 Fax: 86 (21) 6289-5553

Beijing Office

12F, Metropolis Tower, No.2, Haidian Dong 3 Street, Beijing, 100080, China

Phone: 86 (10) 8567-9966 Fax: 86 (10) 8567-9066

HORIBA (Thailand) Limited Thailand

East Office

850 / 7 Soi Lat Krabang 30 / 5, Lat Krabang Road, Lat Krabang, Bangkok 10520, Thailand Phone: 66 (0) 2734 4434 Fax: 66 (0) 2734 4438

HORIBA Instruments (Singapore) Pte Ltd. Singapore

3 Changi Business Park Vista #01-01 Akzonobel House, Singapore 486051

Phone: 65 (6) 745-8300 Fax: 65 (6) 745-8155


HORIBA Vietnam Co., Ltd. Vietnam

Unit 6, 10 Floor, CMC Tower, Duy Tan Street, Dich Vong Hau Ward, Cau Giay District, Hanoi, Vietnam Phone: 84 (24) 3795-8552 Fax: 84 (24) 3795-8553

PT HORIBA Indonesia Indonesia

Tangerang-15144, Indonesia Phone: 62 (21) 3044-8525 Fax: 62 (21) 3044-8521

Jl. Jalur Sutera Blok 20A, No.16-17, Kel. Kunciran, Kec. Pinang

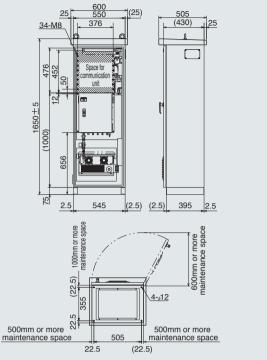

HORIBA KOREA Ltd.

Seoul Branch

10, Dogok-Ro, 6-Gil, Gangnam-Gu, Seoul-Si, 06259, Korea Phone: 82 (2) 753-7911 Fax: 82 (2) 756-4972

HORIBA India Private Limited

246, Okhla Industrial Estate, Phase 3 New Delhi-110020, India Phone: 91 (11) 4646-5000 Fax: 91 (11) 4646-5020

Technical Center

D-255, Chakan MIDC Phase-II, Bhamboli Village, Pune-410501, India Phone: 91 (21) 3567-6000

Bangalore Office

No.55, 12th Main, Behind BDA Complex, 6th sector, HSR Layout, Bangalore South, Bangalore-560102, India

Phone: 91 (80) 4127-3637

USA **HORIBA** Instruments Incorporated

9755 Research Drive, Irvine, CA 92618, U.S.A. Phone: 1 (949) 250-4811 Fax: 1 (949) 250-0924 **Houston Office**

5390 Bay Oaks Drive, Pasadena, TX 77505 Phone: 1 (281) 482- 4334 Fax: 1 (281) 674-6058

HORIBA Instruments Brazil, Ltda. Brazil

Rua: Presbitero Plinio Alves de Souza, 645, Loteamento Polo Multivias Barirro Medeiros-Jundiai Sao Paulo CEP 13.212-181 Brazil

Phone: 55 (11) 2923-5400 Fax: 55 (11) 2923-5490

HORIBA FRANCE SAS

France

Les Ulis Office

Korea

India

12. Av des Tropiques Hightec Sud, F-91955 Les Ulis, France Phone: 33 (1) 69-29-96-23 Fax: 33 (1) 69-29-95-77

HORIBA UK I imited

UK

Austria

Northampton Office

Kyoto Close Moulton Park, Northampton NN3 6FL, UK Phone: 44 (1604) 542-500 Fax: 44 (1604) 542-699

HORIBA Europe GmbH

Germany

Hans-Mess-Str.6 D-61440 Oberursel German Phone: 49 (6172) 1396-0 Fax: 49 (6172) 1373-85 Leichlingen Office

Julius-kronenberg Str.9 D-42799 Leichlingen Germany Phone: 49 (2175) 8978-0 Fax: 49 (2175) 8978-50

HORIBA Czech Czech

Prague Office

Prumyslova 1306 / 7, CZ-10200, Praha 10, Czech Republic Phone: 420 (2) 460-392-65

HORIBA (Austria) GmbH Kaplanstrasse 5 A-3430 Tulin, Austria

Phone: 43 (2272) 65225 Fax: 43 (2272) 65230

Printed in Japan 1707SK62 Bulletin:HAE-T0250A